

Customer Service: (702)361-4345, (800)525-2655, customer.service@kalco.com

WARMING - TO REDUCE THE RISK OF FIRE OR INJURY:

- 1.If you are unfamiliar with electricalwiring, call a qualified electrician to install this unit .More than one person may be necessary to install fixture ,make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a coltage detector to verify that the power is off.
- 3.DO NOT install bulb which exxeeds the maximum wattge specified on the socket label.


Fixture Assembly

Step 1. Fix part #4 to part #5 by using flat screw.

Step 2. Fix part #2 to part #5 by using screw.

Step 3. Install E12 bulbs bulb,do not use bulbs that exceeds 40W.

Step 4. Finally, check the installation, the crystal hanging on the iamp body.

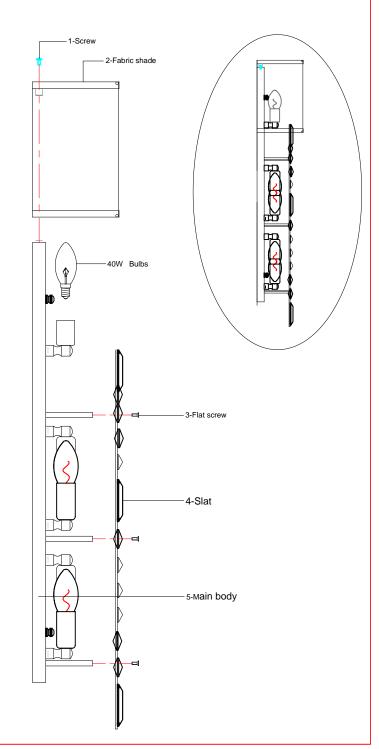



Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

Fixture Assembly

Step 5. Fasten 2 (state specification of screw) into mounting plate so that they extend away from wall when mounting plate is installed

Step 6. Attach the mounting plate to outlet box with sorews

Step 7. Refer to wiring diagram.

Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector

Step 9. Carefully tuck in all wires Attach the backplate with the mounting screw on the crossbar. Secure fixture with shell hnobs.

